

# Bond Breeze Pro

## Compatible Control4 Systems:

Designed to work with OS 3.x+

## **!Bridge Driver Required!**

<https://drivercentral.io/platforms/control4-drivers/utility/bond-home>

## Driver Download, Change Log & Documentation:

<https://drivercentral.io/platforms/control4-drivers/utility/bond-breeze-pro>

---

## Content

- [Dealer Notes](#)
- [Driver Setup](#)
- [Driver Properties](#)
- [Breeze Pro Settings](#)
- [Button Settings](#)
- [Support](#)
- [License Purchase & Assignment](#)
- [Showroom and Free Trial](#)
- [Warranty & Disclaimer](#)
- [Developer Information](#)

---

## Dealer Notes

- The driver links with the Bond Home driver for control
- Threshold on the driver is triggered when the measurement equals to or is above the threshold

- The driver is automatically added to the *Comfort* section in the room it is installed in
- 

## Driver Setup

1. Connect Breeze Pro driver with the Bond Bridge driver
  2. Customize programming based on device thresholds (as well as other events/actions)
- 

## Driver Properties

- *Driver Status*: Displays driver related information
  - *Driver Version*: Displays driver version
  - *Driver Actions*:
    - *Show Icon In All Rooms*: Show icon under the Comfort section
    - *Hide Icon In All Rooms*: Hide icon in rooms
    - *Trigger Wind*: Manually triggers the Wind threshold event
    - *Trigger Rain*: Manually triggers the Rain threshold event
    - *Trigger Sun*: Manually triggers the Sun threshold event
  - *Automatic Updates*: Allows the *Cloud Driver* to automatically update the driver when a new version is available
  - *Debug Mode*: Displays additional information on the lua tab for debugging purposes
- 

## Breeze Pro Settings

- *Device*: Device connected with the driver
  - *Measurement*: Type of measurement scale (celsius or fahrenheit) the driver displays
  - *Sun Threshold*: Level at which the Sun threshold is triggered
  - *Wind Threshold (dms)*: Speeds at which the Wind threshold is triggered
  - *Wind Threshold Measurement*: Device connected with the driver
-

## Button Settings

- *Launch Webview*: Launches driver webview/user interface
  - *Nothing*: Does nothing
  - *Trigger Rain*: Manually triggers the Rain threshold event
  - *Trigger Sun*: Manually triggers the Sun threshold event
  - *Trigger Wind*: Manually triggers the Wind threshold event
- 

## Support

If you require additional driver assistance or are having some issues please visit our help desk: <https://help.drivercentral.io>

## Showroom and Free Trial

All Cindev drivers for Control4 come with a 7-day trial. Simply add the DriverCentral licensing driver, *Cloud Driver*, along with this driver and you can fully test the driver before purchasing. Including Cindev drivers in your drivercentral showroom project will give you unlimited use without purchase.

## Warranty & Disclaimer

[www.cindev.com/terms-and-conditions](http://www.cindev.com/terms-and-conditions)

---

## Developer Information

brought to you by:  
Cinegration Development, LLC



[www.cindev.com](http://www.cindev.com)  
[www.drivercentral.io/cindev/](http://www.drivercentral.io/cindev/)

We are always looking to improve our drivers.  
Please send your suggestions to: [info@cindev.com](mailto:info@cindev.com)