

Bond Home - Fireplace

Compatible Control4 Systems:

Designed to work with OS 3.x+

Driver Download, Change Log & Documentation:

<https://drivercentral.io/platforms/control4-drivers/utility/bond-home>

Content

- [Dealer Notes](#)
 - [Driver Setup](#)
 - [Driver Properties](#)
 - [Fireplace Settings](#)
 - [Button Settings](#)
 - [Support](#)
 - [License Purchase & Assignment](#)
 - [Showroom and Free Trial](#)
 - [Warranty & Disclaimer](#)
 - [Developer Information](#)
-

Dealer Notes

- Fireplace may contain a fan or light which will have control output connections that can be linked to the Bond Fan or Bond Light driver, respectively.
- Lights will have control output connections that can be linked to the Bond Light driver.
- Bond Fireplace can be controlled using a Relay connection (ex. can be used with Control4's fireplace timer)

- By default the Bond Fan will be shown under Comfort in the installed room
 - In addition to the main toggle button there are two other buttons provided by the driver: Increase Flame and Decrease Flame
 - These buttons increase or decrease the fire level by the amount set in the *Flame Increase/Decrease Amount* property
-

Driver Setup

1. Connect driver with a Bond Bridge fireplace
 2. Set Fireplace and Button Settings accordingly
-

Driver Properties

- *Driver Status*: Displays driver related information
 - *Driver Version*: Displays driver version
 - *Driver Actions*:
 - *Show Icon In All Rooms*: Show icon under the Comfort section
 - *Hide Icon In All Rooms*: Hide icon in rooms
 - *Automatic Updates*: Allows the *Cloud Driver* to automatically update the driver when a new version is available
 - *Debug Mode*: Displays additional information on the lua tab for debugging purposes
-

Fireplace Settings

- *Device*: Device connected with the driver
 - *Flame Increase/Decrease Amount*: Amount the flame level will be adjusted when using the increase/decrease buttons
 - *Minimum Decrease Action*: Sets if the decrease button should turn off the fireplace or keep it at the lowest level
 - *Light*: Status of connections with Bond Fireplace's light features
 - *Fan*: Status of connections with Bond Fireplace's fan features
-

Button Settings

- *Flame Toggle*: Toggle through flame states (Low, Medium, High)
 - *Off*: Turn off fan
 - *Nothing*: Does nothing
-

Support

If you require additional driver assistance or are having some issues please visit our help desk: <https://help.drivercentral.io>

Showroom and Free Trial

All Cindev drivers for Control4 come with a 7-day trial. Simply add the DriverCentral licensing driver, *Cloud Driver*, along with this driver and you can fully test the driver before purchasing. Including Cindev drivers in your drivercentral showroom project will give you unlimited use without purchase.

Warranty & Disclaimer

www.cindev.com/terms-and-conditions

Developer Information

brought to you by:
Cinegration Development, LLC



www.cindev.com
www.drivercentral.io/cindev/

We are always looking to improve our drivers.
Please send your suggestions to: info@cindev.com