

ZUUM

ZUUM IP Camera Driver

Compatible Control4 Systems: 2.9.1+

Compatible Hardware: ZUUM IP Camera and NVR/XVR

Support: 1.888.861.7351

Initial Setup/Installation of Driver

1. (Install ZUUM NVR driver if not already installed and setup)
2. Bind Camera driver to correct nvr channel or choose Direct Camera access under Driver Actions

Installation Note: It is recommended to connect directly to cameras. IP camera video streams that must be reprocessed through the NVR have slower link up times to Control4.

Direct Camera Method (preferred method)

- Camera is connected to PoE switch on same subnet as Control4 Director
- Camera driver accesses camera directly through LAN



Setup NVR/XVR Connection Method

- Cameras are connected to NVR PoE
- Camera video is sent through NVR
- Only recommended for small 1-3 camera projects
- Make binding to NVR Driver on Connections

CAM 2				
Name	Type	Connection	Input/Output	Connected To
Control Inputs				
NVR_Link	Control	NVR_LINK	Input	NVR Viewer->NVR Channel 2



Video Stream Settings

Configuration of the video streams is recommended. Below are the typical settings an installer should set the video to:

- 🔗 Code-Stream Type: Continuous
- 🔗 Compression: H.264
- 🔗 Resolution: 1280*720(720P)
- 🔗 Frame Rate(FPS): 15
- 🔗 Bit Rate Type: CBR
- 🔗 Bit Rate: 1024

Video/Camera Events:

The NVR driver can be used to trigger events in Control4 systems. Use Composer Events under the NVR driver to use.

PTZ Control

PTZ Cameras can be used with driver. Preset, Pan, Tilt and Zoom are supported. Note: must be using PTZ camera driver.