

# ZUUM

Support/Installation Help: ZUUM Tech Support : 888-861-7351

Driver Overview: Controls ZUUM HDMI Switches via IR, IP or RS\_232

## Setup

- Add driver to project
- Make bindings
- Enter IP address or connect RS232 or IR to driver

## Driver Notes

**Custom RS232 Commands:** If the model has RS232 connection on the HDBaseT units (8x8), the dealer can send 1 way RS232 messages from Control4 programming to that RS232 connected device. This would be helpful for commercial applications where global on/off commands were needed or projector control was needed for special macros. To use this feature, select the matrix switch and under Actions at the bottom is a command: Send RS232 Command with options for string (example: POWERON\r) the HDBaseT port to send the message and baud rate.



