



Home Modes Experience Button Driver

This simple driver allows you to select 3 modes for a Home.



The faded icons indicates the selection is in process but no events are executed until the Selection Timeout timer (set in the properties section) has timed out.

This allows you to cycle through modes without executing any programming.

There is a button connection that will allow you to cycle through the three modes. The keypad button led will update with the color selected in the driver properties.

Changelog

- **Version 1**
 - Initial Release