



## **Domaudeo Advanced Fireplace Button Driver**

### **Installation**

Add the driver to the project and provide a meaningful name for it in Composer.

Use the Navigator tab in System Design to select which rooms and on which menu the button will appear. It will be available for every room but will be hidden by default.

### **Configuration**

Select the control method for On/Off and Intensity. Relay or Dimmer or a mix if both is possible as control methods.

You can use the same dimmer for On/Off and Intensity

If you use Relays, bind the relay connection for On/Off and each intensity

Intensity Relay Mode can be Cycle of Maintain. In Cycle Mode, each intensity will close a relay and open the others (for example, set the Fireplace to MED and the MED relay will be held closes while LOW and HIGH relays will be open)

In Maintain mode, the relays of lower intensities are maintained (for example, if you set the Fireplace to MED, the relay for LOW and MED will be held close)