



Driver for Integration NovaStar

LED Panel Controllers, VX Series

Objective:

Integration to the Control4 solution, commanding loads presets, Brightness, set Inputs. To use Layer2, connect Layer2 to desired room

Requirements:

Control4 **system** running version 2.10 or higher

Driver Properties:

Debug Mode

On | Off

Used for activity tracking, typically by the developer

Command Delay-Milliseconds

Interval in ms between commands

IP

Enter NovaStar IP. Reserve this IP on DHCP router table or leave fixed on Novastar device

TCP Port

Communication port, default: 5200

Connection

Connection type

Actions & Programming (commands)

Send Complete Command

Case you have complete API (we cannot share this info) you can send data by this resource

Preset

Send (Load) Presets. Device and Screen IDs are zero from default

Brightness

Send Brightness (0 to 255)

Change Log

Version 1080 dec/30/2025 Initial Version