

White Paper: Hunter Douglas PowerView


2.15.2022

How to use SDDP/Driver Add Driver

The PowerView driver supports Driver Add Driver and SDDP. Until the driver has finished Control4 certification, you will need to add the drivers into the Controllers memory first in order for Driver Add Driver (DAD) to work.

To use Driver Add Driver

- Add Each PowerView driver into the project (just one per driver)

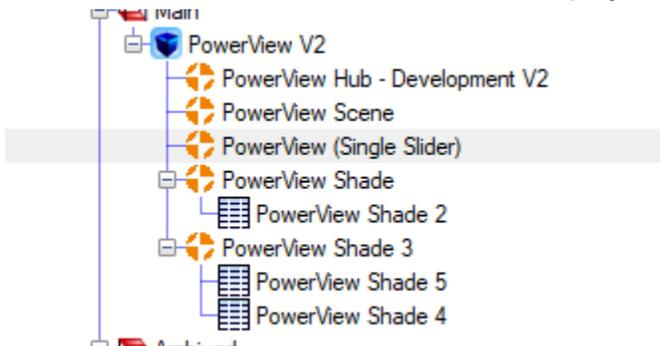

- Wait 10 seconds
- Delete all the drivers

The drivers are now stored in the Controllers memory and SDDP/Driver Add Driver will work
