



# ESPHome

---

## Overview

---

Integrate ESPHome-based devices into Control4. ESPHome is an open-source system that transforms common microcontrollers, like ESP8266 and ESP32, into smart home devices through simple YAML configuration. ESPHome devices can be set up, monitored, and controlled using a web browser, Home Assistant, or other compatible platforms. This driver enables seamless monitoring and control of ESPHome devices directly from your Control4 system.

## Index

---

- [System Requirements](#)
- [Features](#)
- [Compatibility](#)
  - [Verified Devices](#)
  - [Supported ESPHome Entities](#)
- [Installer Setup](#)
  - [DriverCentral Cloud Setup](#)
  - [Driver Installation](#)
  - [Driver Setup](#)
    - [Driver Properties](#)
      - [Cloud Settings](#)
      - [Driver Settings](#)
      - [Device Settings](#)
      - [Device Info](#)
    - [Driver Actions](#)
- [Configuration Guides](#)
  - [ratgdo Configuration Guide](#)
- [Developer Information](#)
- [Support](#)
- [Changelog](#)

# System requirements

---

- Control4 OS 3.3+

## Features

---

- Local network communication requiring no cloud services
- Real-time updates from all [supported entities](#) exposed by the device
- Supports encrypted connections using the device encryption key
- Variable Programming Support

## Compatibility

---

### Verified Devices

---

This driver will generically work with any ESPHome device, but we have tested extensively with the following devices:

- [ratgdo](#) - [Configuration Guide](#)

If you try this driver on a product listed above, and it works, let us know!

# Supported ESPHome Entities

---

Entity Type	Supported
Alarm Control Panel	✗
API Noise	✗
Binary Sensor	✓
Bluetooth Proxy	✗
Button	✓
Climate	✗
Cover	✓
Datetime	✗
Date	✗
Time	✗
Camera	✗
Event	✗
Fan	✗
Light	✓
Lock	✓
Media Player	✗
Number	✓
Select	✗
Sensor	✓
Siren	✗
Switch	✓
Text	✓
Text Sensor	✓
Update	✗
Valve	✗
Voice Assistant	✗

# Installer Setup

⚠ Only a **single** driver instance is required per ESPHome device. Multiple instance of this driver connected to the same device will have unexpected behavior. However, you can have multiple instances of this driver connected to **different** ESPHome devices.

## DriverCentral Cloud Setup

If you already have the [DriverCentral Cloud driver](#) installed in your project you can continue to [Driver Installation](#).


This driver relies on the DriverCentral Cloud driver to manage licensing and automatic updates. If you are new to using DriverCentral you can refer to their [Cloud Driver](#) documentation for setting it up.

## Driver Installation

Driver installation and setup are similar to most other ip-based drivers. Below is an outline of the basic steps for your convenience.

1. Download the latest `control4-esphome.zip` from [DriverCentral](#).
2. Extract and [install](#) the `esphome.c4z` , `esphome_light.c4z` , and `esphome_lock.c4z` drivers.
3. Use the "Search" tab to find the "ESPHome" driver and add it to your project.

⚠ A **single** driver instance is required per ESPHome device.

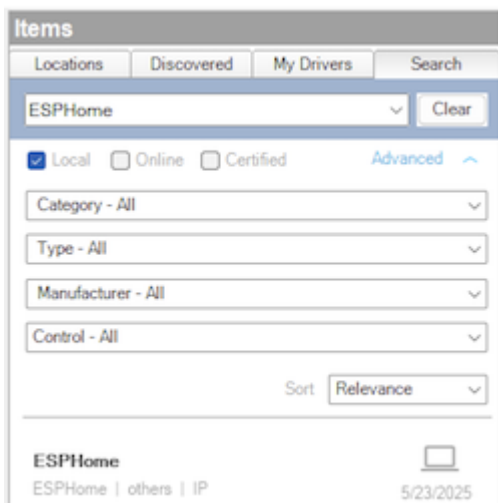

4. Select the newly added driver in the "System Design" tab. You will notice that the **Cloud Status** reflects the license state. If you have purchased a license it will show **License Activated** , otherwise **Trial Running** and remaining trial duration.
5. You can refresh license status by selecting the "DriverCentral Cloud" driver in the "System Design" tab and perform the "Check Drivers" action.

Properties	Documentation	Lua
Cloud Status	Check-in Success, Last Check-in: Sun Feb 12 21:32:13 2023	
Project Information	(13) Total, (10) Licensed, (3) Trials, (0) Expired, (0) Updates.	
Driver Version	1032	
Project Token	<div></div>	
Driver Actions	<div>(Select) (1) Check Drivers (2) Auto Update All On (3) Auto Update All Off</div>	

6. Configure the **Device Settings** with the connection information.
7. After a few moments the **Driver Status** will display **Connected** . If the driver fails to connect, set the **Log Mode** property to **Print** and re-set the **IP Address** field to reconnect. Then check the lua output window for more information.
8. Once connected, the driver will automatically create variables and connections for each supported entity type.
9. To control lights and/or locks, use the "Search" tab to find the "ESPHome Light" and/or "ESPHome Lock" driver. Add one driver instance for each exposed light or lock entity in your project. In the "Connections" tab, select the "ESPHome" driver and bind the light or lock entities to the newly added drivers.

## Driver Setup

---

### Driver Properties

#### Cloud Settings

##### Cloud Status

Displays the DriverCentral cloud license status.

##### Automatic Updates

Turns on/off the DriverCentral cloud automatic updates.

#### Driver Settings

##### Driver Status (read-only)

Displays the current status of the driver.

### Driver Version (read-only)

Displays the current version of the driver.

### Log Level [ Fatal | Error | Warning | Info | Debug | Trace | Ultra ]

Sets the logging level. Default is Info .


### Log Mode [ Off | Print | Log | Print and Log ]

Sets the logging mode. Default is Off .

## Device Settings

### IP Address

Sets the device IP address (e.g. 192.168.1.30 ). Domain names are allowed as long as they can be resolved to an accessible IP address by the controller. HTTPS is not supported.

 If you are using an IP address, you should ensure it will not change by assigning a static IP or creating a DHCP reservation.

### Port

Sets the device port. The default port for ESPHome devices is 6053 .

### Authentication Mode [ None | Password | Encryption Key ]

Selects the authentication method for connecting to the ESPHome device.

- **None:** No authentication required.
- **Password:** Use a password for authentication (see below).
- **Encryption Key:** Use an encryption key for secure communication (see below).

### Password

Shown only if [Authentication Mode](#) is set to Password .

Sets the device password. This must match the password configured on the ESPHome device.

### Encryption Key

Shown only if [Authentication Mode](#) is set to Encryption Key .

Sets the device encryption key for secure communication. This must match the encryption key configured on the ESPHome device.

## Device Info

### **Name (read-only)**

Displays the name of the connected ESPHome device.

### **Model (read-only)**

Displays the model of the connected ESPHome device.

### **Manufacturer (read-only)**

Displays the manufacturer of the connected ESPHome device.

### **MAC Address (read-only)**


Displays the MAC address of the connected ESPHome device.

### **Firmware Version (read-only)**

Displays the firmware version of the connected ESPHome device.

## **Driver Actions**

### **Reset Connections and Variables**

 This will reset all connection bindings and delete any programming associated with the variables.

Reset the driver connections and variables. This is useful if you change the connected ESPHome device or there are stale connections or variables.

---

# ratgdo Configuration Guide


---

This guide provides instructions for configuring the ESPHome driver to work with ratgdo devices for garage door control via relays in Control4 Composer Pro.

## Add Relay Controller Driver

---

Add the desired relay controller driver to your Control4 project in Composer Pro.

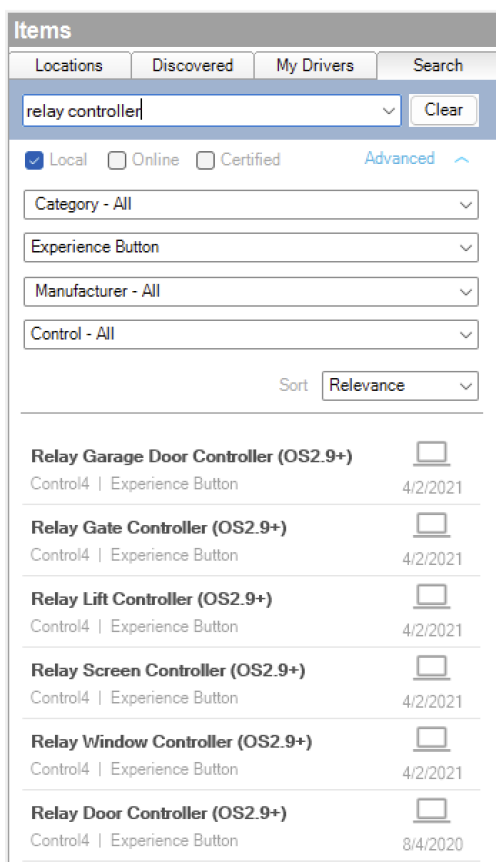

## Relay Controller Properties

---

The ratgdo device exposes a "Cover" entity in ESPHome, which maps to the relay controller functionality in Control4.

## Number of Relays

The ratgdo device uses a multi-relay configuration to control the garage door. In Composer Pro, you should configure the relay settings as follows:



- Set to **2 Relays** (Open/Close) or **3 Relays** (Open/Close/Stop)
  - The ratgdo device uses separate commands for opening and closing the garage door
  - If your ratgdo firmware supports the "stop" command, configure for 3 relays to enable the stop functionality. If you are not sure, you can look at the ratgdo connections in Composer Pro to see if the "Stop Door" relay is available.

## Relay Configuration

- Set to **Pulse**
  - ratgdo uses momentary pulses to trigger the garage door opener, similar to a wall button press

## Pulse Time

- Set all relay pulse times to **500** (default)
  - This is the duration the relay will be activated

## Invert Relay

- Set all invert relay properties to **No** (default)

## Contact Debounce

- Set all contact debounce times to **250** (default)
  - This helps prevent false flapping of the garage door state sensors

## Invert Contact

- Set all invert contact properties to **No** (default)

## Example Properties

For reference, here is an example of the relay controller properties in Composer Pro:

Properties

Properties

Summary

List View






Advanced Properties

Properties

Actions

Documentation

Lua

Driver Version	11
Debug Mode	Off
Icon Set	Light
Number of Relays	3
Relay Configuration	Pulse
Open/Toggle Relay Pulse Time	500
Invert Open/Toggle Relay	No
Close Relay Pulse Time (ms)	500
Invert Close Relay	No
Stop Relay Pulse Time (ms)	500
Invert Stop Relay	No
Contact Status	Found both 'closed' and 'opened' contact sensors
Opened Contact Debounce (ms)	250
Invert Opened Contact	No
Closed Contact Debounce (ms)	250
Invert Closed Contact	No
Still Open Time (s)	60
Expected Open Time (s)	60
Expected Close Time (s)	60
Opened LED Color	 R: 000 G: 000 B: 255
Closed LED Color	 R: 000 G: 000 B: 000
Off LED Color	 R: 000 G: 000 B: 000
Partial Open LED Color	 R: 000 G: 000 B: 255
Unknown LED Color	 R: 255 G: 000 B: 000

# Relay Controller Connections

## Relays









- **Open:** Connect to the ratgdo's "Open Door" relay
- **Close:** Connect to the ratgdo's "Close Door" relay
- **Stop:** Connect to the ratgdo's "Stop Door" relay, if available

## Contact Sensors

- **Closed Contact:** Connect to the ratgdo's "Door Closed" contact
- **Opened Contact:** Connect to the ratgdo's "Door Open" contact

## Example Connections

For reference, here is an example of how the connections should look in Composer Pro:

Control & Audio Video Connections				
Garage Door				
Name	Type	Connection	Input/Output	Connected To
Control Inputs				
 Open	Control	RELAY	Input	Garage Door ratgdo->Open Door
 Close	Control	RELAY	Input	Garage Door ratgdo->Close Door
 Stop	Control	RELAY	Input	Garage Door ratgdo->Stop Door
 Closed Contact	Control	CONTACT_SENSOR	Input	Garage Door ratgdo->Door Closed
 Opened Contact	Control	CONTACT_SENSOR	Input	Garage Door ratgdo->Door Open
Control Outputs				
 Toggle	Control	BUTTON_LINK	Output	
 Open	Control	BUTTON_LINK	Output	
 Close	Control	BUTTON_LINK	Output	

## Programming

You can create programming in Control4 to:

- Open/close the garage door based on events
- Monitor the garage door state
- Set up notifications for garage door status changes
- Create custom buttons on touchscreens and remotes

### Example: Creating a "Still Open" Alert

Using the "Still Open Time" property from the relay controller driver:

1. Set the "Still Open Time" to your desired duration (e.g., 10 minutes)
2. Create a programming rule that triggers when the "Still Open" event fires
3. Add actions to send notifications or perform other tasks

## Additional Entities

Depending on your ratgdo device, firmware, and its capabilities, there may be additional entities exposed by the ESPHome driver. These can come as additional connections or driver variables.

Please refer to ratgdo's documentation for more information on specific entities:

[https://ratgdo.github.io/esphome-ratgdo/webui\\_documentation.html](https://ratgdo.github.io/esphome-ratgdo/webui_documentation.html)

# Developer Information

---



**FINITE LABS**

Copyright © 2025 Finite Labs LLC

All information contained herein is, and remains the property of Finite Labs LLC and its suppliers, if any. The intellectual and technical concepts contained herein are proprietary to Finite Labs LLC and its suppliers and may be covered by U.S. and Foreign Patents, patents in process, and are protected by trade secret or copyright law. Dissemination of this information or reproduction of this material is strictly forbidden unless prior written permission is obtained from Finite Labs LLC. For the latest information, please visit

<https://drivercentral.io/platforms/control4-drivers/utility/esphome>

## Support

---

If you have any questions or issues integrating this driver with Control4 or ESPHome, you can contact us at [driver-support@finitelabs.com](mailto:driver-support@finitelabs.com) or call/text us at +1 (949) 371-5805.

# Changelog

---

## **v20251031 - 2025-10-31**

---

### **Fixed**

- Fixed compatibility with ESPHome 2025.10.0 for devices configured without passwords
- Improved password authentication failure detection and error reporting

## **v20251022 - 2025-10-22**

---

### **Fixed**

- Fixed an issue with parsing unknown fields in protobuf messages

## **v20251019 - 2025-10-19**

---

### **Added**

- Added support for OpenSSL with "Encryption Key" authentication mode across all applicable algorithms

### **Fixed**

- Fixed a bug with the authentication flow in the latest 2025.10.0 firmware

## **v20250811 - 2025-08-11**

---

### **Fixed**

- Fixed switch entities not responding to bound relay proxies

## **v20250715 - 2025-07-14**

---

## **Fixed**

- Fixed bug causing entities to not be discovered on connect

## **v20250714 - 2025-07-14**

---

## **Added**

- Added support for encrypted connections using the device encryption key

## **v20250619 - 2025-06-19**

---

## **Added**

- Added ratgdo specific documentation

## **v20250606 - 2025-06-06**

---

## **Added**

- Initial Release